

Thank you for buying Suzuki Glockenspiel SG-320ST. Please be sure to read this instruction manual to use this product safely for a long time. Please keep instruction manual in a safe place.


Precautions for use

Prohibition Attention matters

- Do not ride on or play on the sound bars. It may not only damage the product, but also it may cause an unexpected accident.
- Do not hit with heavy objects other than mallets, angular objects, metal, etc.. It may not only damage the product, but also it may cause an unexpected accident.
- Do not use or store in places with high humidity, hot places, or places where the humidity or temperature changes suddenly. It may damage


- When assembling or adjusting the stand, be careful not to get your fingers caught in the moving parts.
- If the product becomes dirty, wipe it with a soft, dry cloth. Do not use oils (thinner, benzine, etc.) If the product becomes dirty, wipe it with a soft, dry cloth. Do not use oils (thinner, benzine, etc.). It may damage
- Be sure to put it on a flat surface. Also, do not drag when moving, and try to lift the stand and carry it quietly.

Set content

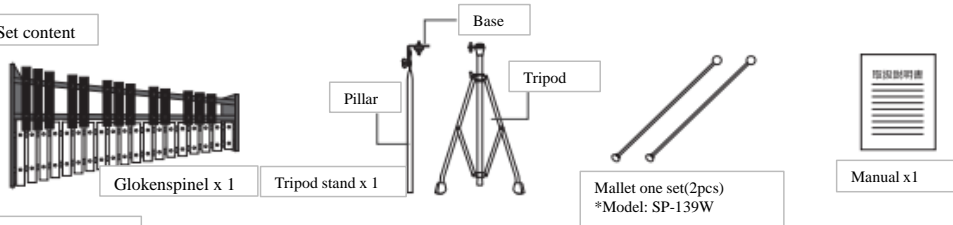


How to assemble

Assemble from step 1 when attaching to a stand, and from step 5 when playing on a desk or the like.

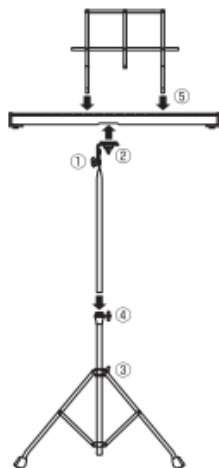


1. Fix the angle of the pillar

Loosen the thumbscrew "1" and move the pillar back and forth. Tighten the thumbscrew firmly at the position where

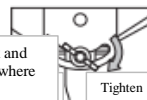

2. Attach the support to the Glockenspiel

Turn the Glockenspiel over and secure the pillar in the hole on the back. As shown in the image on the right, place the A side on the base to the low notes, and tighten the thumbscrews firmly to fix it. *Spread a cloth to prevent the instrument from being damaged.

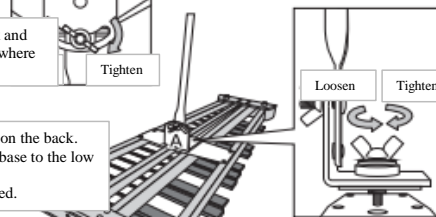

3. Open the tripod

Loosen the knob of 3 and push down the moving part. When you reach the appropriate position, tighten the knob


Low notes side

4. Attach the pillar to the tripod

Loosen the knob of 4, insert the support, and when it reaches the appropriate position, tighten the knob firmly to fix it.

5. Install the music stand

Slide the music stand to assemble it, and insert it into the hole on the back of the Glockenspiel body.

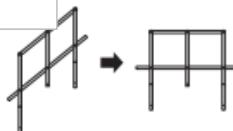


Adjust height

Loosen the knob of 4 and move the support up and down to adjust the height. Tighten the knob firmly to fix it.

Adjust angle

Loosen the thumbscrew 1 and move the Glockenspiel body back and forth to adjust the angle. Tighten the knob firmly to fix it.

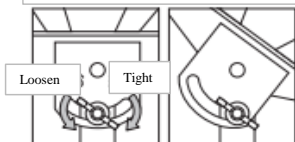

When moving the metal fittings and screws, support the Glockenspiel body. It may cause an unexpected accident such as the main body suddenly dropping.

Specifications;

- *Glockenspiel
- Range: Chromatic 32notes f2-c5(F57-C88)
- Material: Aluminium bar
- Measurement: 63(L) x 36(W) x 5.5(H) cm
- Stand: approx. 63-91cm(Adjustable height)
- Weight: Glockenspiel 2.4kg
- Stand 1.2kg
- *Mallet
- Material: ABS for head and handle
- Measurement: Dia: 20 x 352mm